



#### The HW Kit

- 2x micro USB cables
- 1 uSD card reader
- 1 Pocket BeagleBoard
- 1 BaconBits Cape
- 1 uSD card
- 1 uSD o SD adaptor





## Slides on USB Key

- 4GB USB Key
- Contains all the slides
- Contains all the code
- Yours to keep





# USB Keys with rubber bands


- These USB Keys are for transferring Yocto Images only
- We'd like to get these back when you're finished please.





#### The Pocket Beagle


- BaconBits cape
- PocketBeagle Board

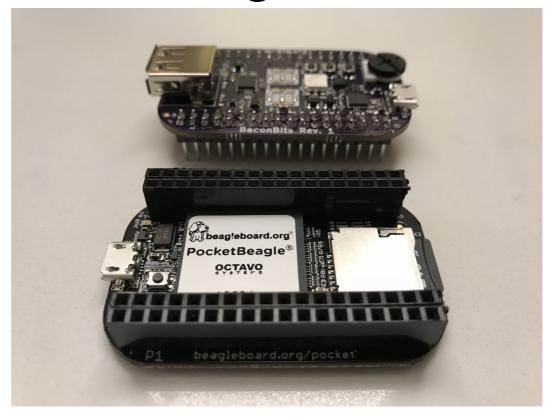



# Attaching the cape

 The USB type-A connector on the cape is at the same end as the micro USB port on the PocketBeagle Board

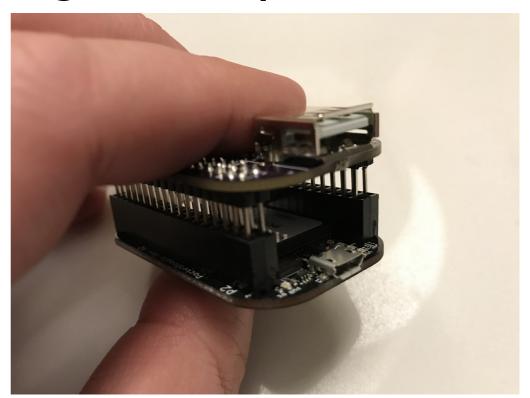



Attaching the cape

Align pins and push carefully together






# The console port

 The micro USB-to-Serial console port on the cape, is over the uSD card reader



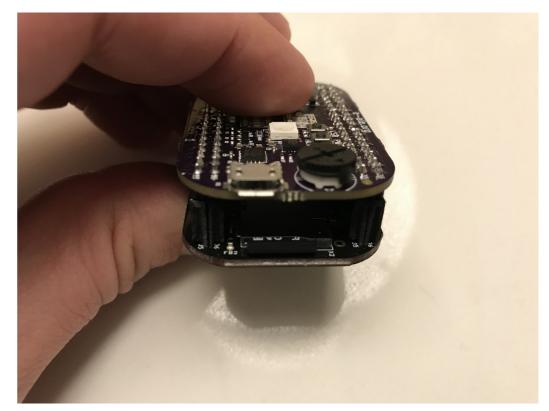



#### **USB** Networking

 The micro USB port on the PoketBeagle is used for Ethernet over USB (CDC or RNDIS).





#### **USB** Power

- The Pocket beagle can be powered from either micro USB port.
- Both cables can be plugged in

